SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.











You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions





There are three versions of this pattern.

The Stand up and Cheer is a stand alone pattern.

There are also two blank patterns for your child or grandchild who is a cheerleader.

There is space for their name.


I also included information for a stencil font.









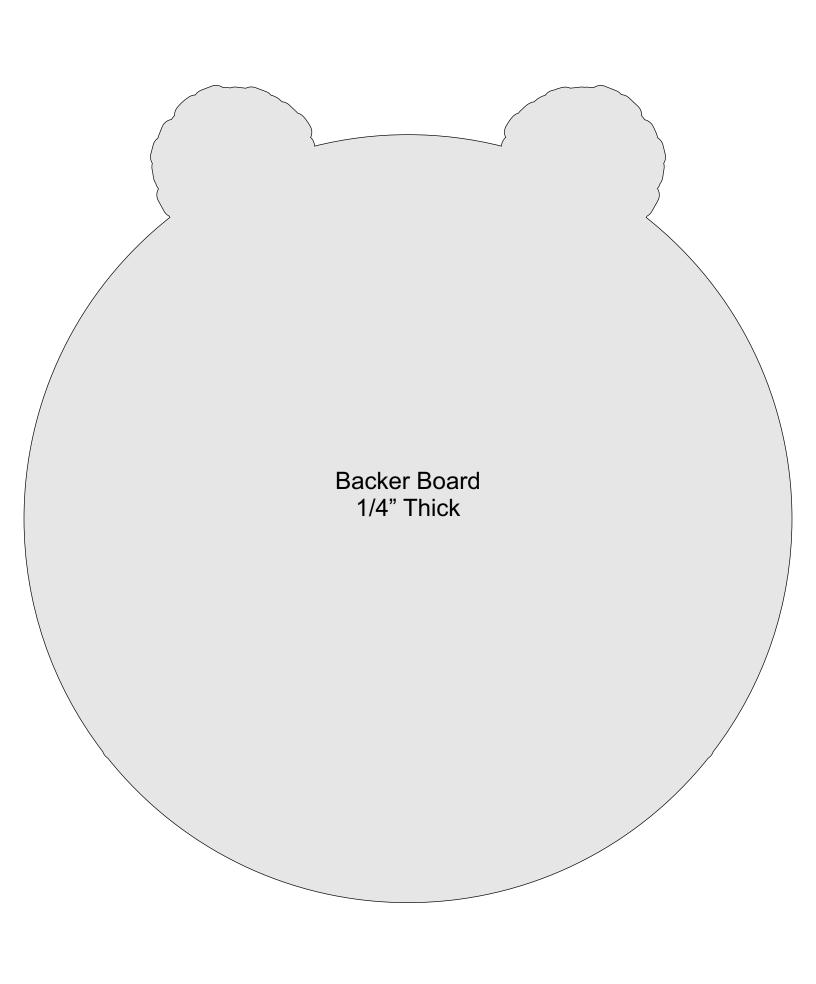

If you have a stencil font on your computer then use that. A font size of 48 is what I normally use. If you do not have a stencil font then you can try the one at this link

https://www.dafont.com/stencil-gothic-be.font

If that fails you can cut the letter out below and tape them to the pattern to spell out the name.

ABCDEFGHI

JKLMNOPQR

STUVWXYZ