



Proud SAW Member

Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer



The Hummer




The assembly is fairly straight forward.
Study the pictures before you begin the
project.



I used a 2 3/4" clock insert.
Woodcraft #142320

2 3/8" Diameter hole

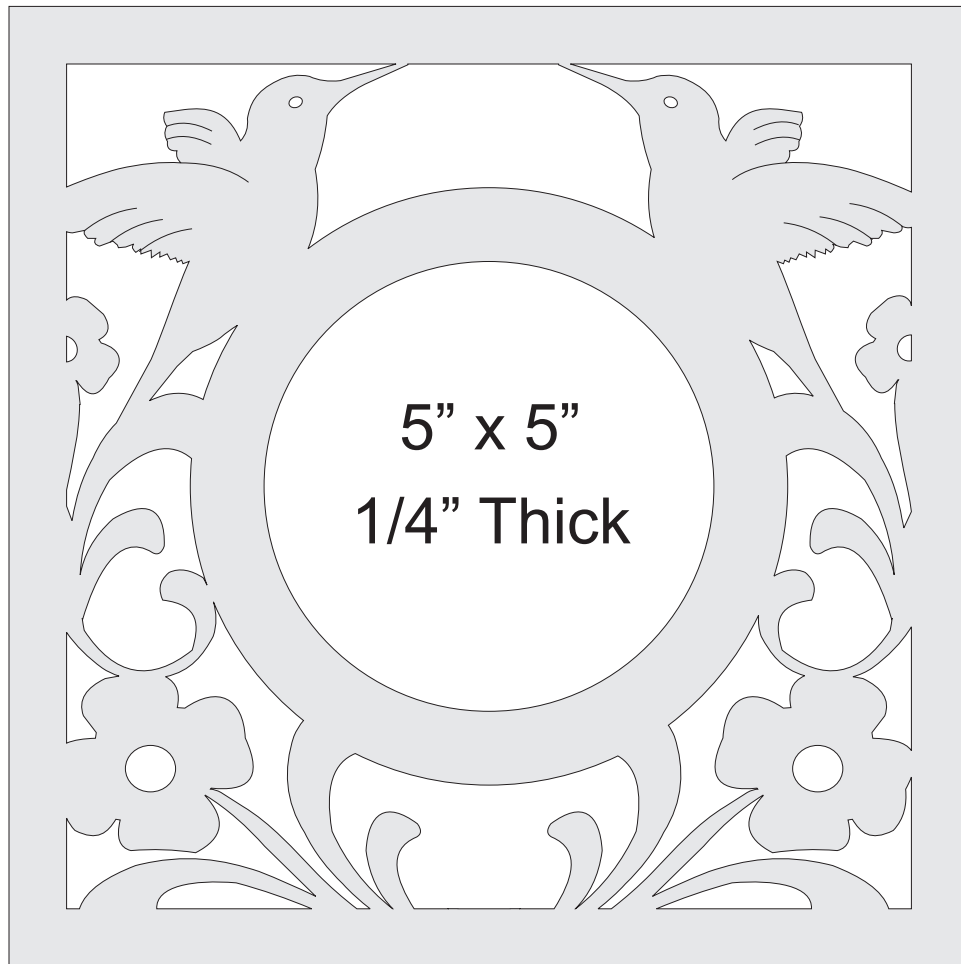


1/2" Thick

1/2" Thick


1/2" Thick

1/2" Thick


1/4" Thick

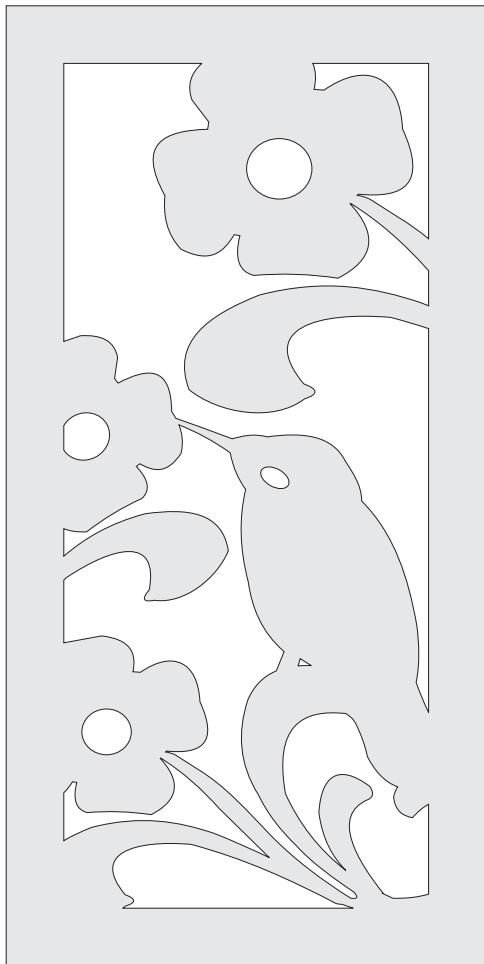

2 1/2" x 5"

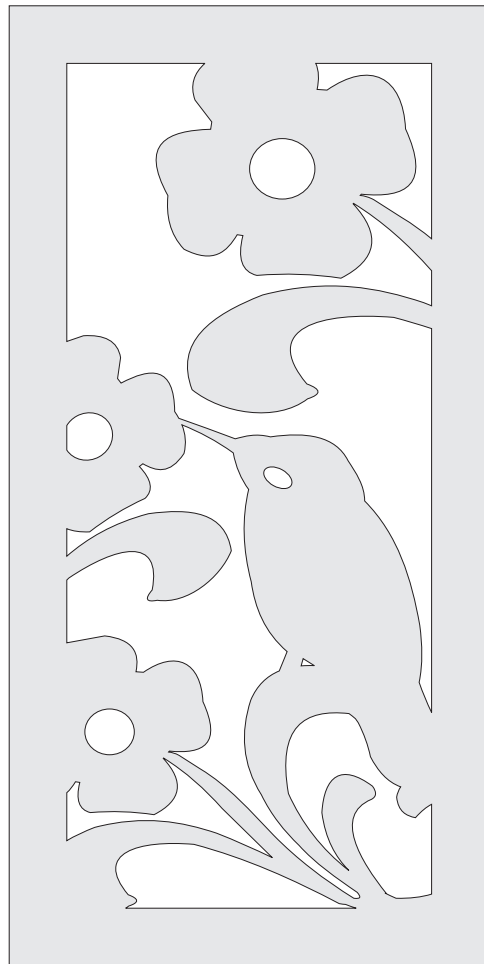

2 1/2" x 5"

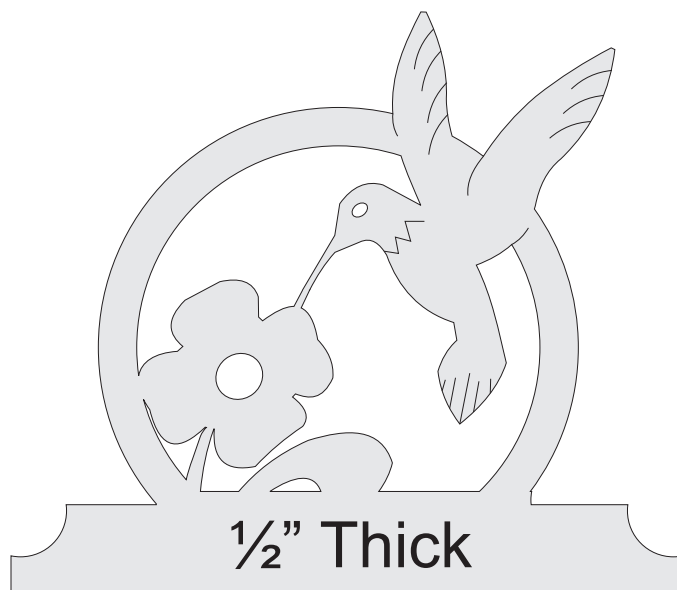

1/2" Thick

Back
5" x 5"
1/4" Thick

Top

6" x 4"

½" Thick

Bottom

6" x 4"

½" Thick

If you have a router add a decorative edge treatment to the top and bottom.